





**FT/FG/DG
Alternator Kit:
Basic Assembly**

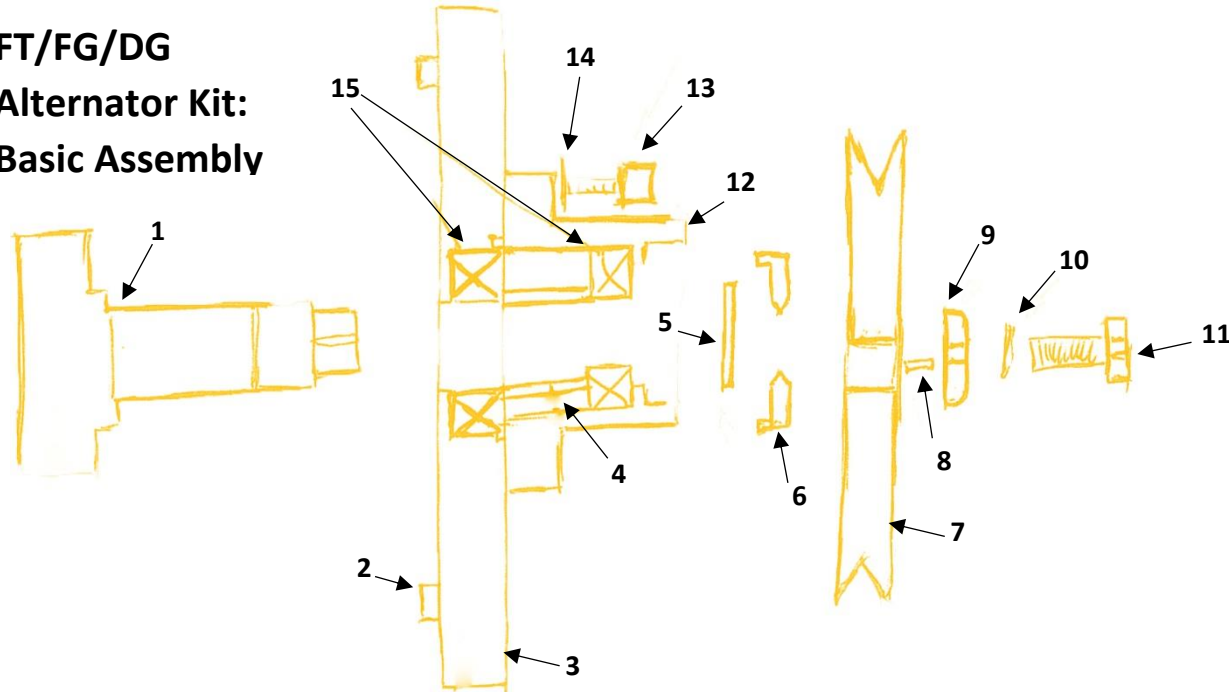

- | | |
|----------------------------------|------------------------------------|
| 1. Drive shaft | 9. Pulley cap |
| 2. Dowel .500" x .498" Ø | 10. Spring washer |
| 3. Back plate | 11. 3/8" UNF HEX Bolt 1" Long |
| 4. Bearing spacer | 12. Extension housing |
| 5. Circlip (20mm external shaft) | 13. 5/16 UNC CAP Bolt x 1¼ Long x4 |
| 6. Seal | 14. Washer x4 |
| 7. Pulley | 15. 6004 2RS Bearing |
| 8. Key | |


FT/FG/DG End Cover – Rear POV

MACHINE COUNTER BORE IN FINGER HOUSING FOR 0.50" DIA DOWEL AT THIS POSITION
COUNTER BORE TO BE 0.50" DIAMETER X 0.20" DEEP

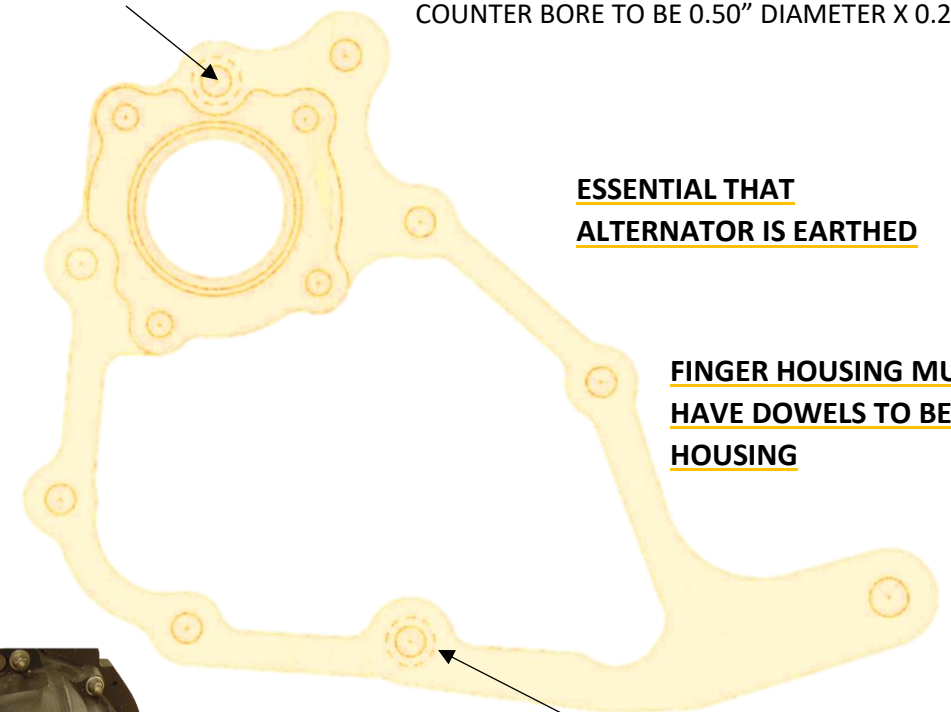

**ESSENTIAL THAT
ALTERNATOR IS EARTHED**

**FINGER HOUSING MUST ALSO
HAVE DOWELS TO BEARING
HOUSING**

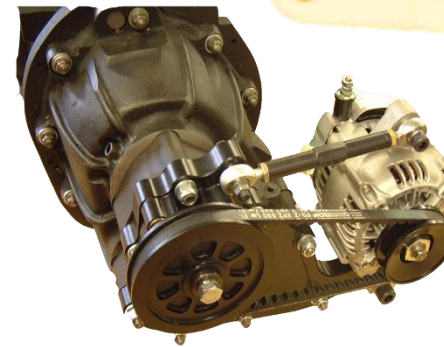

MACHINE COUNTER BORE IN FINGER HOUSING
FOR 0.50" DIA DOWEL AT THIS POSITION

COUNTER BORE TO BE 0.50" DIAMETER X 0.20"
DEEP

